Steps to program Fusion Bar Code Scanner

Code Byte 0

5

6

7

9

One Beep

Enter/Exit Configuration Mode



Three Quick Beeps



Two Beeps

2

1



One Beep



Three Beeps

3



Enable Five Digit

One Beep



One Beep

4



One Beep

Enter/Exit Configuration Mode



Three Slow Beeps