

Metrologic Counter Scanner Scale

Setup Barcodes


2BCLMS2320

Scanner/Scale **Single Cable** RS232
Retailix/NCR Communication, English

Communication Port Settings:


- 9600 Baud
- 8 Data Bits
- 1 Stop Bit
- No Parity

Retailix/NCR Metric

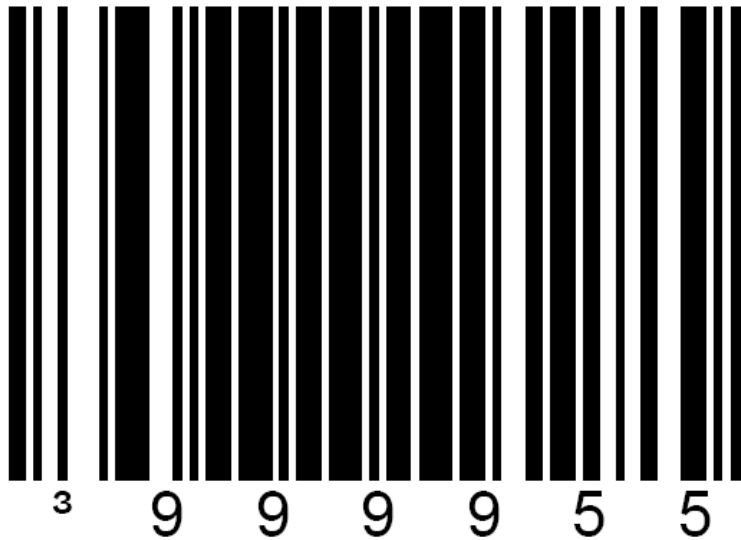


3 beeps

Enter/Exit Configuration Mode

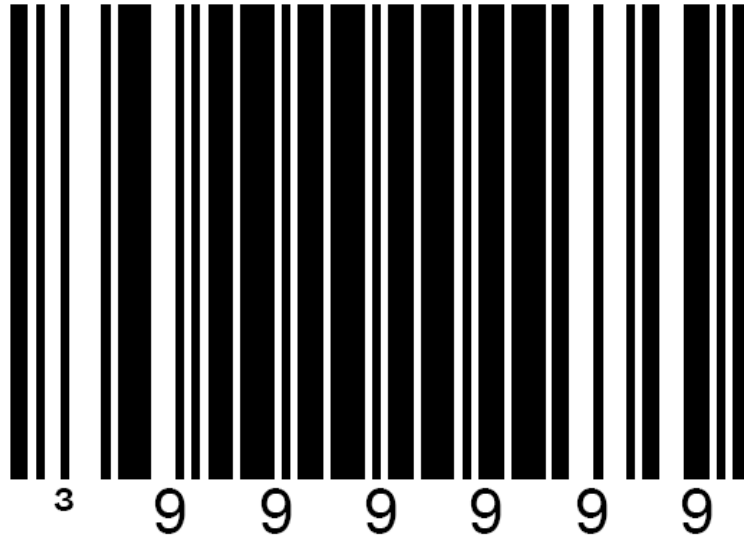


3 beeps

* Disable NCR Prefix ID

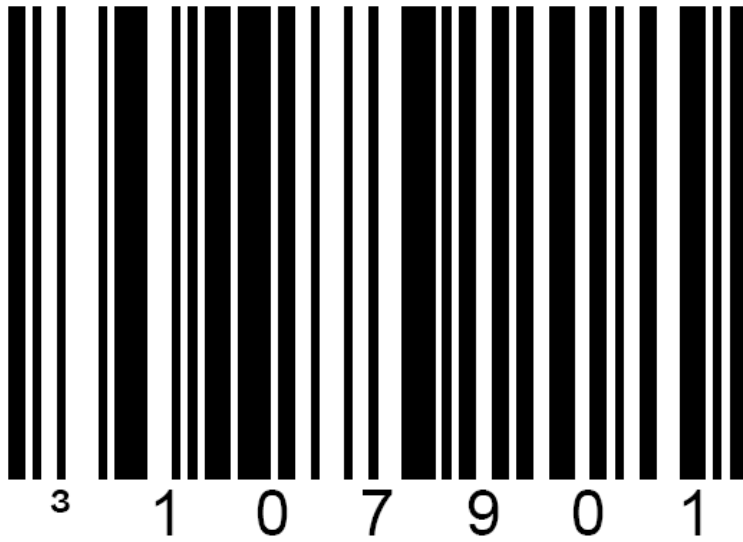


1 beep

Enable Nixdorf ID Characters

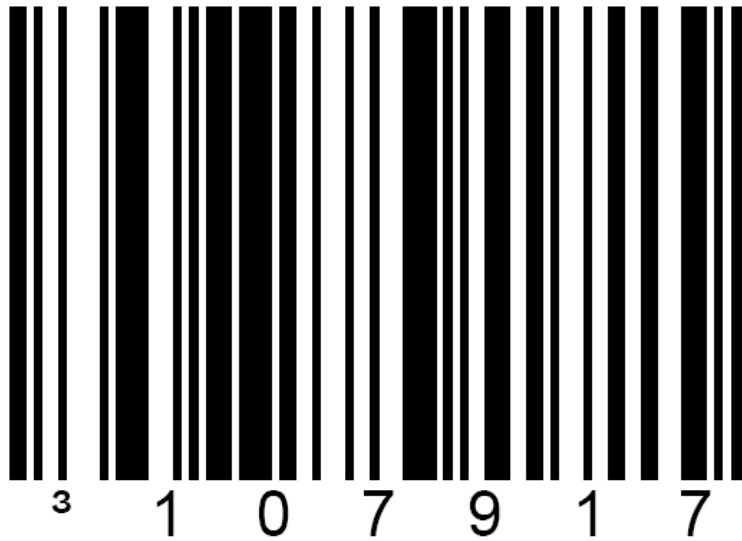

1 beep

* Enable CR Suffix

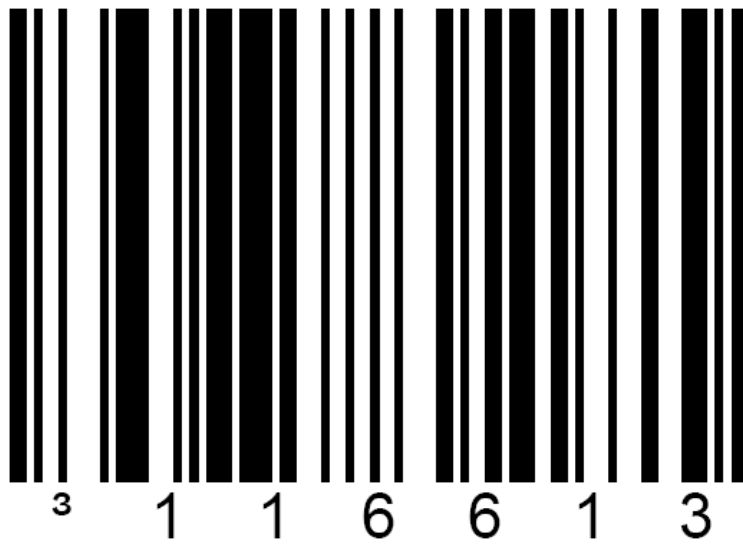


1 beep

* Disable ETX Suffix




1 beep

* Disable Transmit of
LCR Calculation

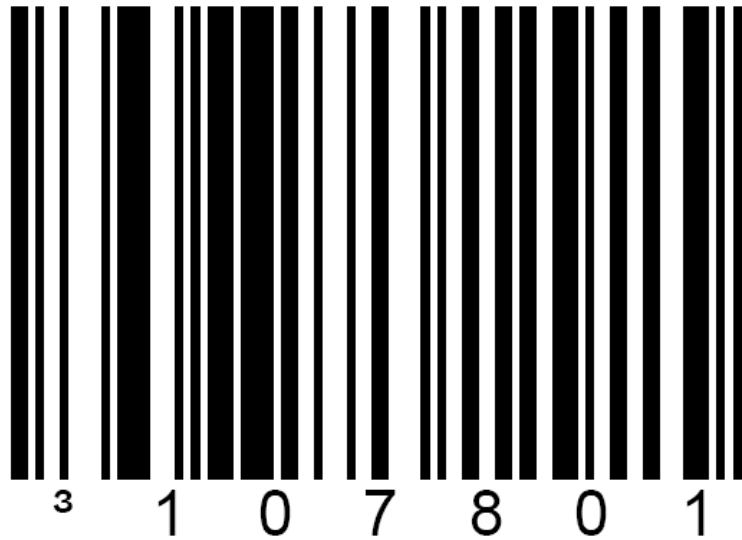


1 beep

* Enable Code 128

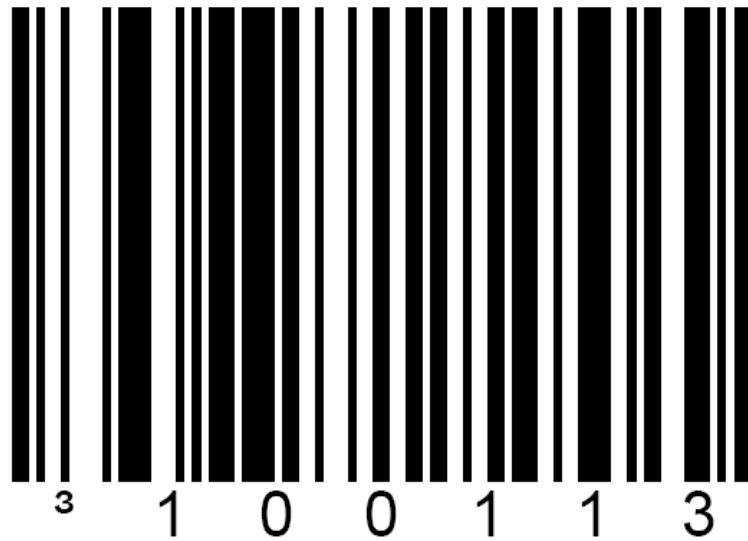


1 beep

* Enable Code 39

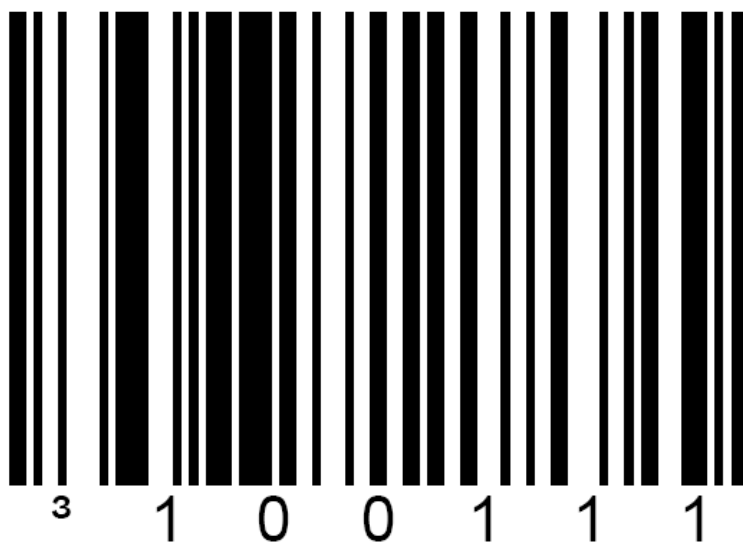


1 beep

* Enable Interleaved
2 of 5 (ITF)

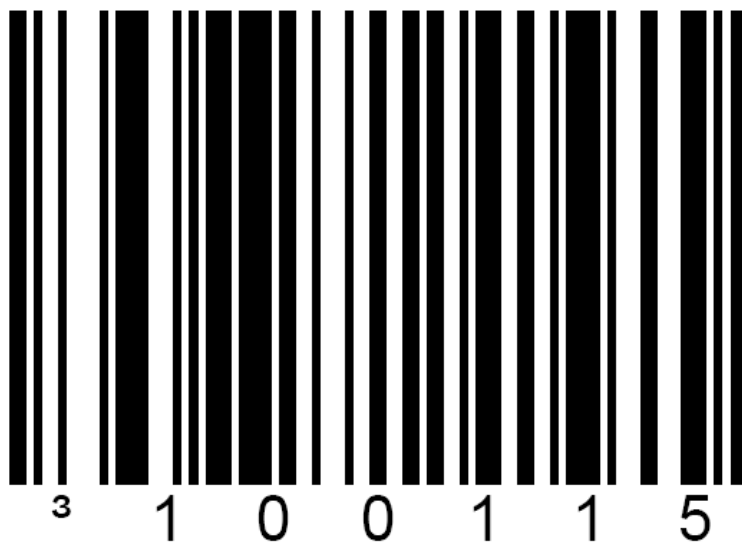


1 beep

Enable
Standard 2 of 5

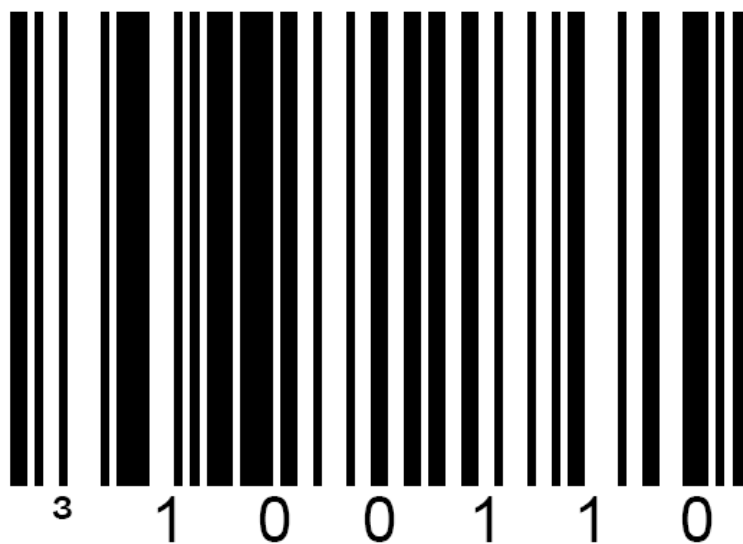


1 beep

* Enable Codabar

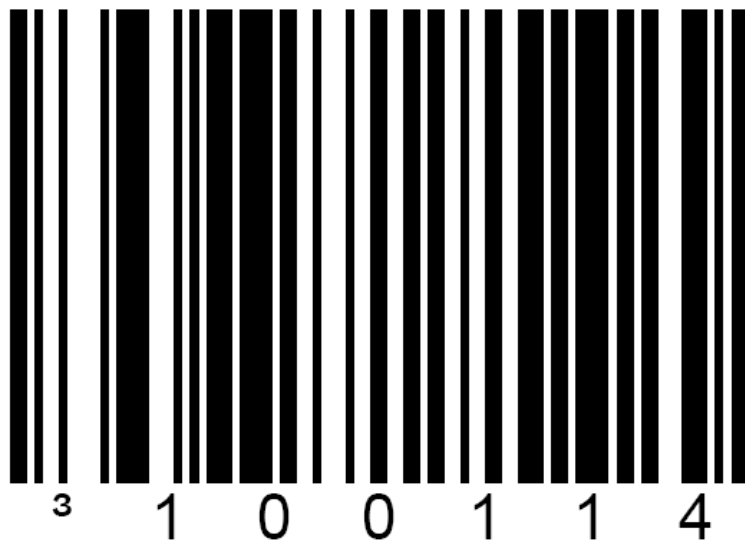


1 beep

Enable Code 11

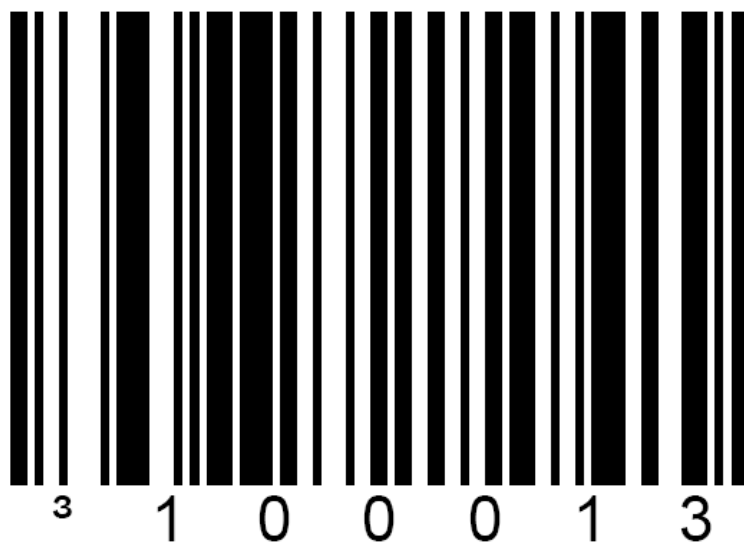


1 beep

* Enable Code 93

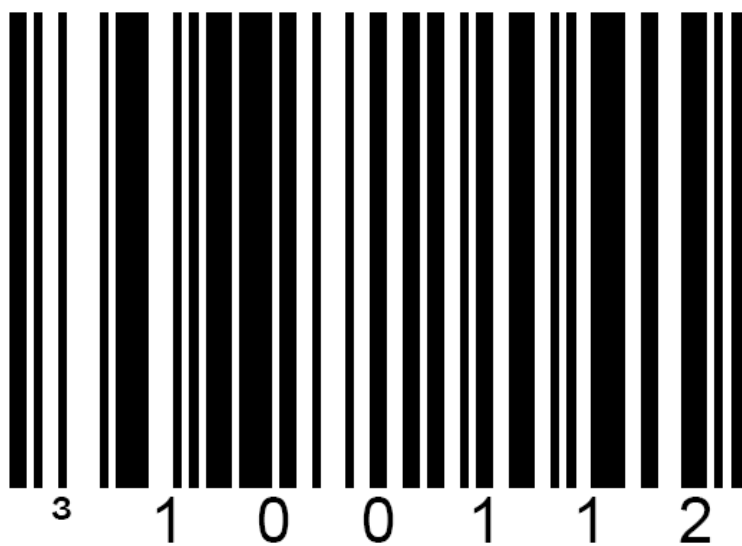

1 beep

Enter/Exit Configuration Mode

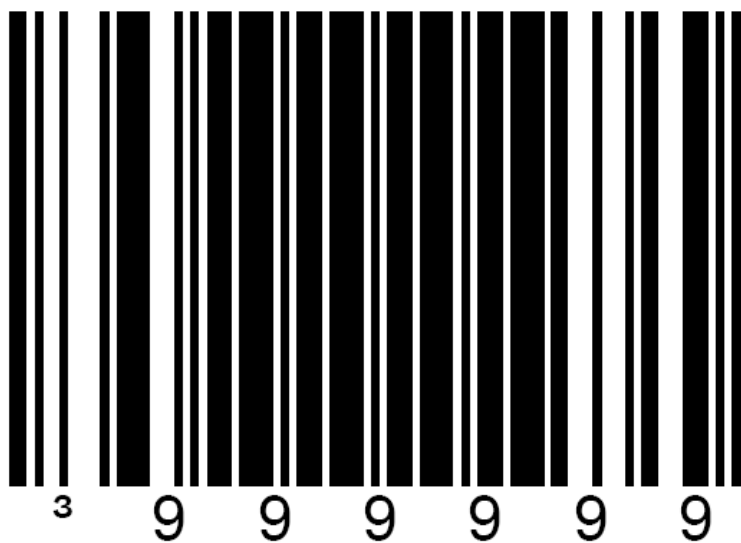

3 beeps