

Zebra DS2278 or DS2208



Set Factory Defaults

Return wireless to cradle to reset, then continue below.



Symbol Code ID Character



<PREFIX> <DATA> <SUFFIX 1>



Scan Prefix



1



0



 
1



7




Disable Keypad Emulation



Disable USB Fast HID

Optional, use only if dropping characters:

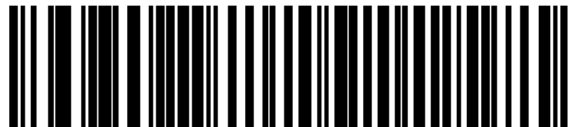

Medium Delay (20 msec)

USB stop here. For Bluetooth connection without cradle:



Disable Keypad Emulation



Fast HID Disable



Medium Delay (20 msec)

For Bluetooth pairing:



HID Bluetooth Classic