

# Motorola Symbol LS9208 Programming Sheet



Set All Defaults



Scan Prefix (Value 2)



Scan Suffix (Value 1)



Symbol Code ID Character



1



6



Scan Options



0



0



<PREFIX> <DATA> <SUFFIX>



1



5



Enter



7



8

# Motorola Symbol LS9208 Programming Sheet (continued)




Autodiscriminate UPC/EAN/JAN Supplementals



Send All Data That Remains



No Preamble  
(<DATA>) UPC-E1

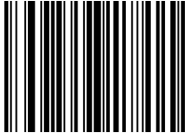


Begin New Rule




Send Enter Key



EAN-13

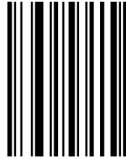

Save Rule

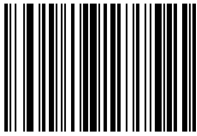

Send Control Q



Do Not Transmit UPC-E Check Digit



Send Z



Do Not Transmit UPC-E1 Check Digit



Skip Ahead 1 Character



No Preamble  
(<DATA>) UPC-E